



R206A

Description

R206A balancing valves maintain a constant flow rate of the fluid as the upstream/downstream pressure difference varies.

The set flow rate is guaranteed inside the declared range of differential pressure, with a maximum mistake of $\pm 5\%$ on controlled flow rate values, or $\pm 2\%$ on the maximum flow.

They automatically balance the hydronic circuit and ensure the design flow rate. They are composed of a brass body, with female-female connections and prearranged for the connection of P206Y001 sensor holder, to measure the differential pressure, and they have a cartridge that can be replaced if needed. It can be calibrated through a key (8 mm) that compensates the pressure differential by guaranteeing the flow rate constancy.

A double indicator, having 1 to 5 scale and decimal decision from 1 to 9, permits precise flow rate regulations.

(Please refer to the following page for the complete regulation tables for the different valve types).

Versions and codes

Codes	Connections	Working flow rate [m ³ /h]	Working pressure Δp [kPa]
R206AY013	1/2"	0,276 - 0,825	17 - 200
R206AY014	3/4"	0,406 - 1,270	30 - 400
R206AY015	1"	0,535 - 5,830	17 - 400
R206AY016	1 1/4"	0,535 - 5,830	17 - 400
R206AY017	1 1/2"	3,180 - 16,100	20 - 400
R206AY018	2"	3,180 - 16,100	20 - 400
R206AY033	1/2"	0,100 - 0,412	17 - 210
R206AY034	3/4"	0,100 - 0,412	17 - 210

Accessories

P206Y001: Sensors holder (no.2) kit for the flow rate determination through measurement of the differential pressure, 1/4" M connections.

Technical data

- Maximum working temperature: 120 °C
- Maximum working pressure: 25 bar
- Maximum differential pressure: 4 bar (2 bar for R206AY013, R206AY033, R206AY034)

Material

- Cartridge: POM (Polyoxymethulene) and PSU (Polysulfone)
- Body: Forged brass ASTM CuZn40Pb2


Installation

It is recommended to install strainer prior the valve body to prevent damage or blockage due to debris. Further, it is recommended not to exceed maximum differential pressure control range of the cartridge.

Failure to abide by all recommendations as per this installation and operation instruction will void warranty.

Flow rate calculation

To calculate the flow rate of the R206A dynamic balancing valves, you just have to measure the differential pressure, by installing in the housings of the valve the sensor holder P206Y001 and by using a differential pressure manometer. If the differential pressure is included in the cartridge Δp range and it is higher than the minimum value requested for the presetting flow rate, then the flow rate is equal to the nominal value written in the tables in the next page.

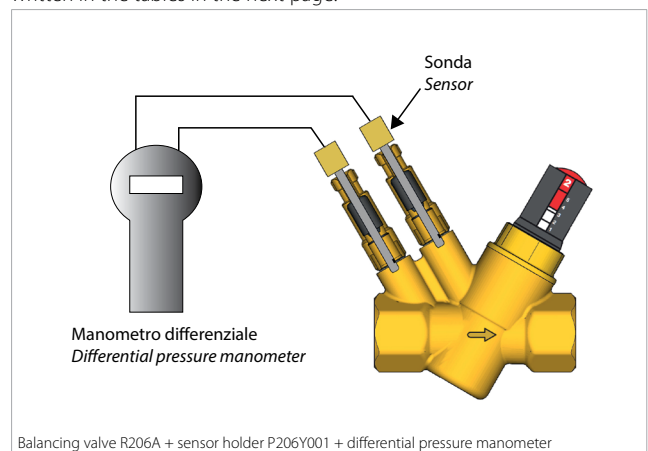

Balancing valve R206A + sensor holder P206Y001 + differential pressure manometer




Caution.

Leakage of hot water can occur through the pressure outlets during the sensor introduction of the sensors. Wear protective clothes and glasses in order to prevent personal physical damages during the pressure measure.

Do not use lubricants on the sensors to ease the outlet insertion. If needed simply wet the sensors with clean water. Do not leave the measure needle too much time in the pressure outlet, as it could cause leakages.

Dimensions

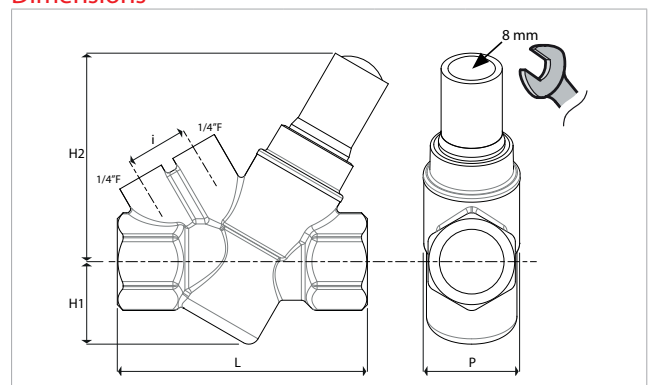

Product code	Connect.	L [mm]	H1 [mm]	H2 [mm]	i [mm]	P [mm]
R206AY013	1/2"	82	31	78	22	36
R206AY014	3/4"	94	31	78	22	36
R206AY015	1"	128	47	99	22	65
R206AY016	1 1/4"	128	47	99	22	65
R206AY017	1 1/2"	169	54,5	117	22	100
R206AY018	2"	169	54,5	117	22	100
R206AY033	1/2"	82	31	78	22	36
R206AY034	3/4"	94	31	78	22	36



R206AY013 - Δp: 17-200 kPa		
l/sec	l/h	Setting
0,0767	276	1.0
0,0813	293	1.1
0,0860	310	1.2
0,0907	326	1.3
0,0953	343	1.4
0,100	360	1.5
0,105	377	1.6
0,109	393	1.7
0,114	410	1.8
0,118	426	1.9
0,123	443	2.0
0,128	459	2.1
0,132	475	2.2
0,136	491	2.3
0,141	507	2.4
0,145	523	2.5
0,150	539	2.6
0,154	554	2.7
0,158	569	2.8
0,162	584	2.9
0,166	599	3.0
0,170	614	3.1
0,174	628	3.2
0,178	642	3.3
0,182	655	3.4
0,186	669	3.5
0,189	682	3.6
0,193	695	3.7
0,196	707	3.8
0,200	719	3.9
0,203	731	4.0
0,206	742	4.1
0,209	753	4.2
0,212	764	4.3
0,215	774	4.4
0,218	784	4.5
0,220	793	4.6
0,223	802	4.7
0,225	810	4.8
0,227	818	4.9
0,229	825	5.0

R206AY014 - Δp: 30-400 kPa		
l/sec	l/h	Setting
0,113	406	1.0
0,119	427	1.1
0,125	449	1.2
0,131	470	1.3
0,137	492	1.4
0,143	513	1.5
0,149	535	1.6
0,155	556	1.7
0,161	578	1.8
0,167	599	1.9
0,172	621	2.0
0,178	642	2.1
0,184	664	2.2
0,190	685	2.3
0,196	707	2.4
0,202	728	2.5
0,208	750	2.6
0,214	771	2.7
0,220	793	2.8
0,226	814	2.9
0,232	836	3.0
0,238	857	3.1
0,244	879	3.2
0,250	900	3.3
0,256	922	3.4
0,262	943	3.5
0,268	965	3.6
0,274	987	3.7
0,280	1010	3.8
0,286	1030	3.9
0,292	1050	4.0
0,298	1070	4.1
0,304	1090	4.2
0,310	1120	4.3
0,316	1140	4.4
0,322	1160	4.5
0,328	1180	4.6
0,334	1200	4.7
0,340	1220	4.8
0,346	1240	4.9
0,352	1270	5.0

R206AY033-34 - Δp: 17-210 kPa		
l/sec	l/h	Setting
0,028	100	1.0
0,030	108	1.1
0,032	116	1.2
0,034	123	1.3
0,036	131	1.4
0,039	139	1.5
0,041	147	1.6
0,043	155	1.7
0,045	162	1.8
0,047	170	1.9
0,049	178	2.0
0,052	186	2.1
0,054	194	2.2
0,056	201	2.3
0,058	209	2.4
0,060	217	2.5
0,062	225	2.6
0,064	233	2.7
0,067	240	2.8
0,069	248	2.9
0,071	256	3.0
0,073	264	3.1
0,075	272	3.2
0,077	279	3.3
0,080	287	3.4
0,082	295	3.5
0,084	303	3.6
0,086	311	3.7
0,088	318	3.8
0,091	326	3.9
0,093	334	4.0
0,095	342	4.1
0,097	350	4.2
0,099	357	4.3
0,101	365	4.4
0,104	373	4.5
0,106	381	4.6
0,108	389	4.7
0,110	396	4.8
0,112	404	4.9
0,114	412	5.0

R206AY015-16 - Δp: 17-400 kPa		
l/sec	l/h	Setting
0,149	535	1.0
0,220	793	1.1
0,289	1040	1.2
0,355	1280	1.3
0,418	1510	1.4
0,479	1730	1.5
0,538	1940	1.6
0,594	2140	1.7
0,647	2330	1.8
0,699	2520	1.9
0,748	2690	2.0
0,795	2860	2.1
0,841	3030	2.2
0,884	3180	2.3
0,925	3330	2.4
0,965	3470	2.5
1,00	3610	2.6
1,04	3740	2.7
1,07	3870	2.8
1,11	3990	2.9
1,14	4100	3.0
1,17	4220	3.1
1,20	4320	3.2
1,23	4420	3.3
1,26	4520	3.4
1,28	4620	3.5
1,31	4710	3.6
1,33	4800	3.7
1,36	4890	3.8
1,38	4970	3.9
1,40	5050	4.0
1,43	5130	4.1
1,45	5210	4.2
1,47	5290	4.3
1,49	5370	4.4
1,51	5440	4.5
1,53	5520	4.6
1,55	5600	4.7
1,58	5670	4.8
1,60	5750	4.9
1,62	5830	5.0

R206AY017-18 - Δp: 20-400 kPa		
l/sec	l/h	Setting
0,883	3180	1.0
1,14	4100	1.1
1,37	4940	1.2
1,59	5710	1.3
1,78	6420	1.4
1,96	7070	1.5
2,13	7660	1.6
2,28	8200	1.7
2,42	8700	1.8
2,54	9150	1.9
2,66	9570	2.0
2,77	9960	2.1
2,86	10300	2.2
2,95	10600	2.3
3,04	10900	2.4
3,12	11200	2.5
3,19	11500	2.6
3,26	11700	2.7
3,32	12000	2.8
3,39	12200	2.9
3,45	12400	3.0
3,51	12600	3.1
3,56	12800	3.2
3,62	13000	3.3
3,67	13200	3.4
3,73	13400	3.5
3,78	13600	3.6
3,83	13800	3.7
3,89	14000	3.8
3,94	14200	3.9
3,99	14400	4.0
4,05	14600	4.1
4,10	14800	4.2
4,15	14900	4.3
4,20	15100	4.4
4,25	15300	4.5
4,30	15500	4.6
4,35	15700	4.7
4,39	15800	4.8
4,44	16000	4.9
4,48	16100	5.0

Flow rate diagrams

Accuracy: ± 5% on controlled flow rate

Additional information

For additional information please check the website www.giacomini.com or contact the technical service:

☎ +39 0322 923372

☎ +39 0322 923255

✉ consulenza.prodotti@giacomini.com

This pamphlet is merely for information purposes. Giacomini S.p.A. retains the right to make modifications for technical or commercial reasons, without prior notice, to the items described in this pamphlet. The information described in this technical pamphlet does not exempt the user from following carefully the existing regulations and norms on good workmanship.

Giacomini S.p.A. Via per Alzo, 39 - 28017 San Maurizio d'Opaglio (NO) Italy